


U-Channel base shoe track or Spigot clamps on the stairs?


A quick guide to check which hardware will be compatible with your specific staircase situation.

Do you have a stringer or a slanted angled base or beam on the side of your staircase?


That's a special feature on some staircases designed specifically for railings.

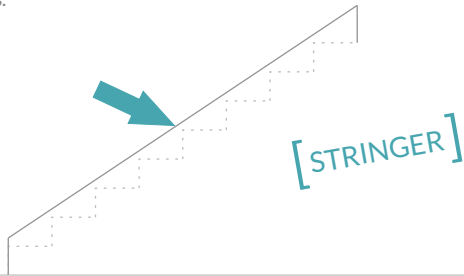



Or is it just the threads or steps exposed on the side?

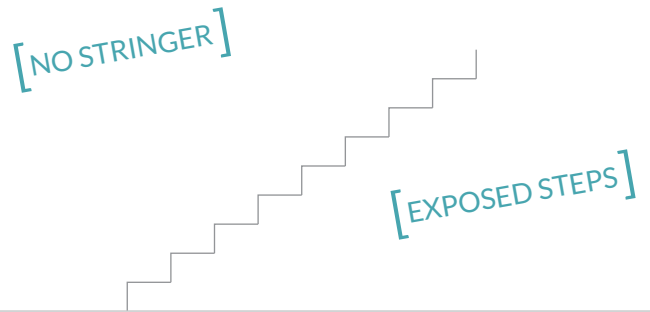


The U-channel slim shoe track is your choice of hardware. The track will fit perfectly on the stringer.

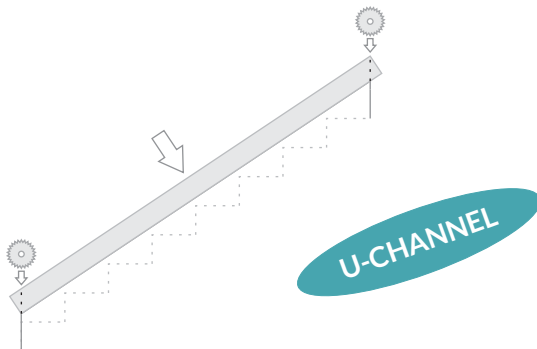

The Spigot clamp will be your hardware of choice. These clamps will be mounted from the top on each thread.

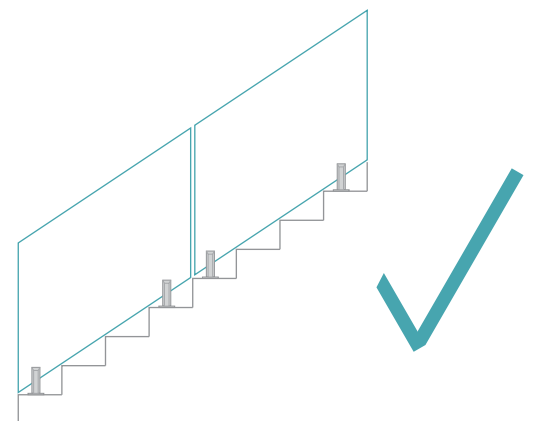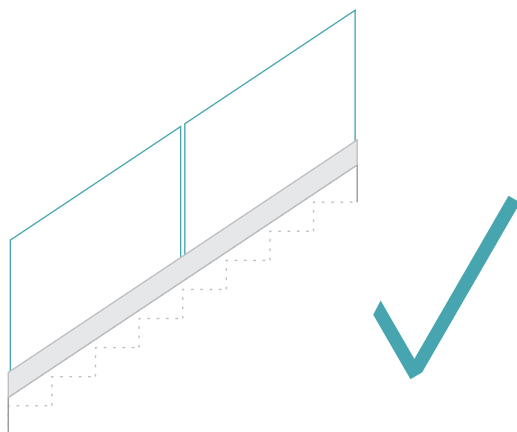

The spigot system is not designed to be mounted on an angle on top of your stringer.

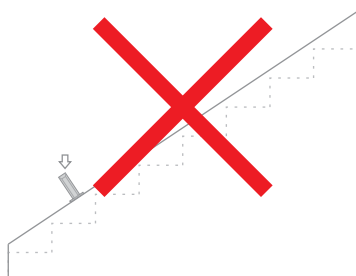

The U-Channel can't be installed on top of threads since there's no base for attachment and gaps would be exposed.

